

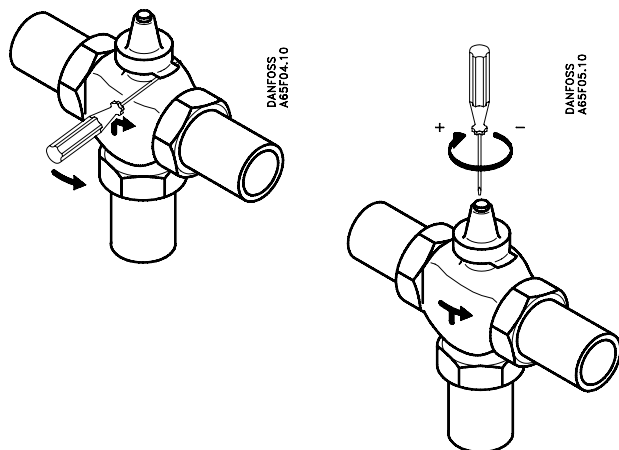
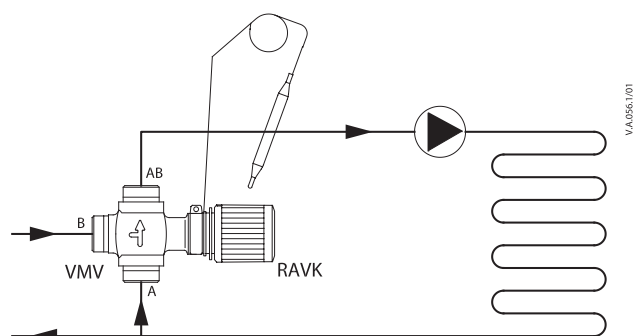


Installation Guide

VMV

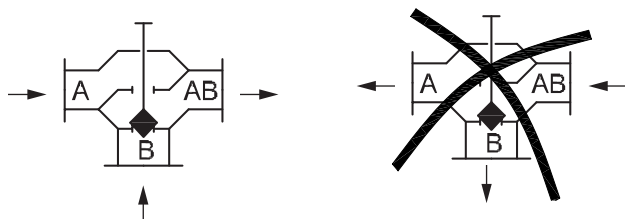


Type	Max. Δp bar
VMV 15	0,6
VMV 20	0,5
VMV 25	0,3
VMV 32	0,2
VMV 40	0,2

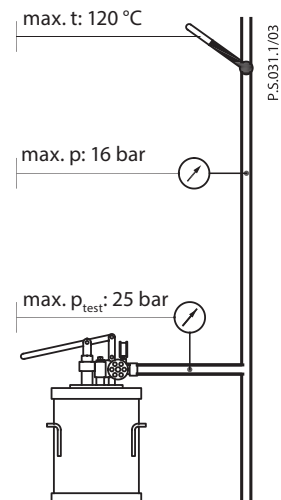


NC (normally closed)

RAVK (only VMV DN 15, 20)
ABV-NC

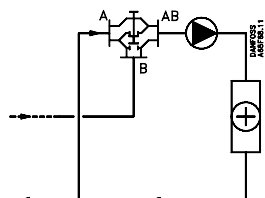


NO (normally open)

ABV-NO

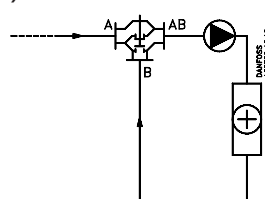

NC (normally closed)

RAVK (only VMV DN 15, 20)
ABV-NC

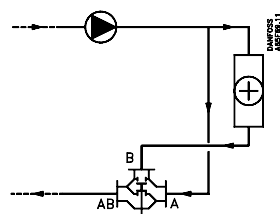

NO (normally open)

ABV-NO

